





## TESA MICRO-HITE THE QUICK AND ACCURATE MEASUREMENT



# TOWARDS EXCELLENCE



The complexity of Modern Industry is increasingly diverse and understanding its needs is paramount to TESA.

Because your metrological concerns are also ours, we are constantly striving to develop solutions adjusted to your needs. Longevity, robustness and simplicity are the core of our passion and innovations are our total commitment to YOU.


The result? Your satisfaction over the years.

#### Our pleasure?

To know that our products help you quickly and efficiently managing the constraints that emanate from your researches and developments.

#### Blaise VUILLE,

TESA Sales & Marketing Director

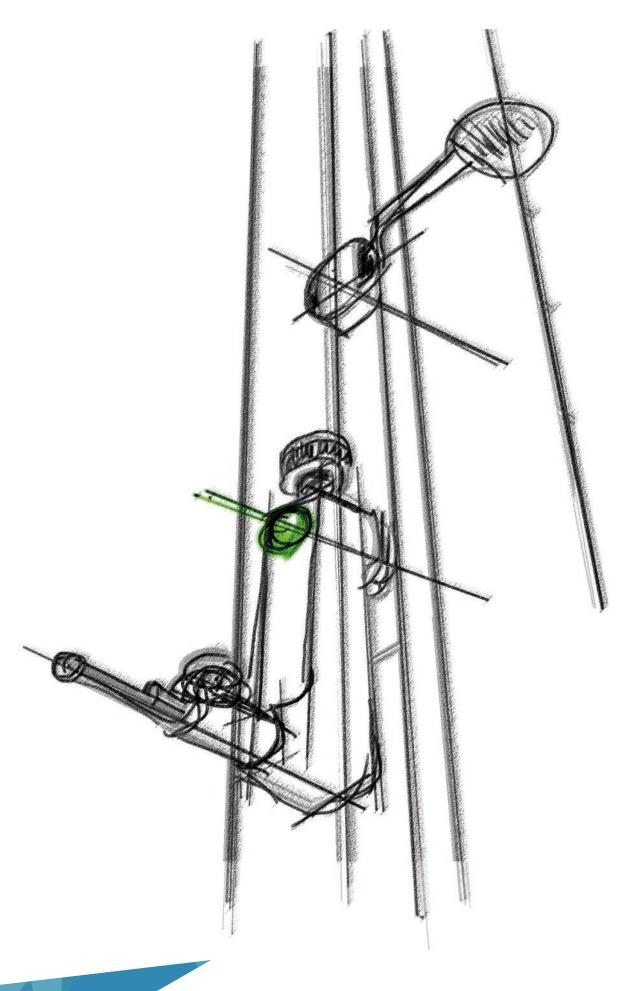

# ONE SOLUTION FOR EACH USE

The range of TESA height gauges consists in different models intended for monitoring operations during manufacturing or directly for a processing machine. These gauges allow a reliable measurement during the setting or sampling when the machining and the dimensions of parts turn out to be critical and need accurate and immediate control.



### TESA MICRO-HITE

These MANUAL gauges are universal workshop or laboratory machines which are reliable and robust to be integrated as close as possible to the user.

Multifunctional but always simple to use, they are a metrological multi-user asset, that replaces the most conventional measuring tools.





# TESA MICRO-HITE+M

The MOTORIZATION of these height gauges makes them the most precise of the range.

They distinguish themselves primarily by their exclusive and patented handwheel for displacement (FEEL&MOVE), combining fast probe positioning with fluidity during the execution of a measurement sequence.

### 350 mm - 600 mm - 900 mm

Embedded patented technologies





Embedded patented technologies



4



HEXAGON MANUFACTURING INTELLIGENCE | TESA Technology | Hexagon MI.com | TESA technology.com

# THE SECURITY OF A PRODUCT OF QUALITY

The TESA products are since their development phase submitted to strict internal standards, aligned with the most restrictive national standards. Thanks to this tight monitoring, all the TESA gauges satisfy the quality charter that we strive to maintain as demanding as possible.



### SCS certificate

Each gauge of the range is delivered with a SCS (Swiss Calibration Service) certificate of measurement.

Any hidden additional extra cost due to a re-certification of the instrument after purchase is avoided.



#### Calibration process

All the height gauges of the TESA range are calibrated and inspected in accordance with the standards described by the ISO 13225 standard. Each instrument is controlled and calibrated according to processes comparable to a real daily use.

The announced technical specifications are in agreement with a real use of the instrument.



#### A philosophy of use for everyone

With its refined user interface, ergonomic panel and context-based help, the MICRO-HITE range is designed to be accessible to any user profile.

Short learning time, user autonomy reached within 1 day maximum.



#### Clear information

No confusion! At any time, the displayed values correspond solely to a measurement or calculation and not to the instantaneous position of the probe.

Decrease of possible errors due to bad interpretations of the displayed results.



#### A robust construction

At the heart of each machine is a design utilizing the excellent microstructure properties of spherical cast-iron. All models incorporate industry accepted materials perfectly suited to the production of traditional components.

The components' stability provides reliability of the instrument in the long term.



#### A monobloc base

All the bases are machined from a single block of material.

1. Reduction of the thickness of the air cushion = decrease of the influence on the results
 2. Easy moving on a surface even with grooves or roughnesses





Motorised TESA MICRO-HITE+M



The QUICKCENTER technology has been specially integrated in order to clarify the information received during the measurement. It is mainly used to determine efficiently the culmination points (minimum, maximum, diameter).

No more endless measurements or hazardous results. With the QUICKCENTER technology, measuring bores/shafts becomes child's play.

 Simplified measurement processes of culmination points reduce drastically the time required to measure a bore/axis
 Visual information during the measurement in noisy environments





# A refined backlit keyboard

With a simplified panel containing a number of keys reduced to the strictly necessary, the handling is easy, fast and does not leave room for confusion.

The keyboard contains a backlight to improve the reading comfort at low-light areas in workshops.

#### 1 key = 1 function

It is no longer necessary to spend long hours learning how to use the instrument. The management of the capacities of the gauge is intuitive which allows to avoid hidden costs during the setting-in.



Each user has the possibility to choose between a 100% touch-use, via the control keyboard, or mixed. This makes the hybrid nature of this panel easy to use when navigating in the various menus as well as while managing measurement actions.



Comfortable and flexible use via the interaction of two navigation processes adapted to any type of environment of use.





Comfort is definitely an important criterion for a regular daily use of an instrument.

The handle has been specially studied to maximize the posture convenience while using the instrument.






# Intelligent hand-wheel

Thanks to the FEEL&MOVE technology, the handling during a measurement with a lot of manipulations and precise movements of the instrument within small elements is comfortable.




1. Fast probe positioning 2. Fluid execution of measurements



The TESA height gauges are supplied with a rechargeable battery easily accessible and quickly removable from the device.

The parallel use of a second battery thanks to an interchangeable system, allows to have an infinite operative instrument without having it connected to an electrical network.

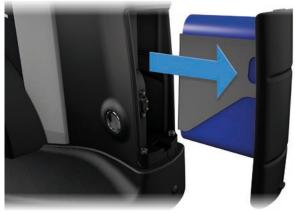







In metrology, each need is different. The arm supporting the control panel allows an adaptable positioning to cover all the situations of use.

Optimal reading of the screen at any time.

ST2							mm deg 💌 5:15:09 PM	
¢	R2 R3	Reference 55.029		*	A	-72.781		Clear interface
	M4	18.109	A	Y	í Ø	-47.721 50.119		Reading information is facilitated through clearly
	MS	-19.264	A	-	•	-97.840		defined areas. This allows the user to concentrate on the essential points of his measurement without
	M7	-21.856		Ŧ				having to decrypt the displayed results.
₽	мв	8.260 -72.781		•				1. Minimized learning time 2. User satisfaction
		Г			4		iii 🖍	3. Minimized error rate 4. Better throughput

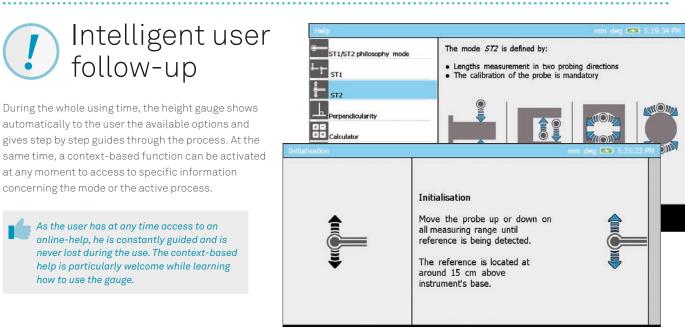

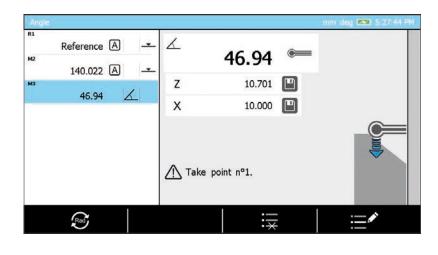




As there are as many application cases as parts to measure, TESA developed a software that offers a range of possibilities to measure, going beyond the simple 1D function, like angle measurement, squareness deviation measurement or 2D measurement.


 Multi-task instrument, accessible to everyone
 Unique investment for numerous measuring possibilities
 Quick return on investment



With its integrated calculator, the control panel gives the possibility to perform calculations using directly the measuring results and to pre-configure calculation functions that will be automatically activated recalling a measuring program.

- All instruments integrated = time gain
   Creation of customised calculation functions adopted to real need
  - 3. Integrated function to avoid reading errors

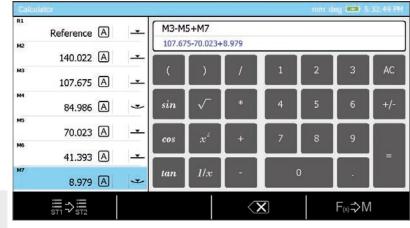

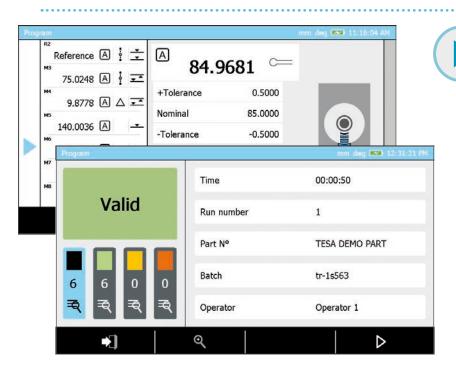

### Program management

The height gauges of the range are not only developed to easily perform quick measurements, but they are also thought to simplify sequential measurement of parts of the same batch. Once the measuring sequence is carried out on the first spare part "for learning", the user can repeat it infinitely following the information displayed on the screen.

> Facilitated sequence creation measuring process. Gain of time and simplification of the process during the measurement of batches.

Clear results

Each part has its own tolerances. The software has been created to allow inserting easily acceptance/reject limits in the most direct possible way. Once the part is measured, the user is explicitly informed about its state.



			ISO Tabi	2					<i>x</i>					mm d	eg 📧	<b>20</b> 1	2.35	14 PM
								☆		6	7	8	9	10	11		12	13
									н									
			JS7						JS									
Progr	ram										m	m deg	<b>I</b> 10	:59:53	АМ	11		
⇔			Feature			Nominal		+Toler	ance	-Tok	arance	De	eviation	Stat	us	ł		
	мз	75.0	132 A	• •	-	7	5		0.5		-0.5		0.032			ł		
	M4	9.7	'25 A		<u> </u>	9.	,		0.5		-0.5		0.025			ł	1	
	MS	140.0	15 A	-	•	14	0		0.2		-0.2		0.015			,		
	MG	84.9	68 A	-	·	8	5		0.5		-0.5		-0.032			/		
	M7	100.0	17 A	•••	Ð	10	0		0.5		-0.5		0.017					
₽	MÐ	30.1	.03 A	ø	Ð	30.	1		0.4		-0.4		0.003					
		<-"				⇒"			٥	>								



# "FLEXIBLE" DATA MANAGEMENT



The TESA MICRO-HITE height gauges are designed to be flexible, its aim to provide the best data management solutions regardless of the type of user or application.



### Printing

The data can be automatically sent to a printer connected to the panel. The printer is optional and can be connected to a gauge at any time during its use.



## Save on USB stick

The data can be saved in a \*.txt file on a memory stick. Several data formats are available (measured value, and tolerances, ...).



### Connection to a peripheral device

It is possible to connect the instrument to a computer via the TLC connector (TESA Link Connector) and to receive the measuring results on it. To do so, two additional programs can be used, TESA STAT-EXPRESS for the statistics management or TESA DATA-DIRECT for the formatting of data.




### Direct information

Quick access to measurement information is a key element of a production line performance. For this purpose, TESA has directly integrated the possibility to insert tolerances for the measured elements. Once the end of a measurement program is reached, the user has the possibility to visualize the detail of his results, which are directly accessible on the instrument panel.



### Fill out a report template in real time

With TESA DATA-DIRECT software, it is possible to measure one or more mechanical parts and to receive automatically formatted data in a report template previously prepared (Excel for example). Once a measurement has been recorded, the report is directly accessible.

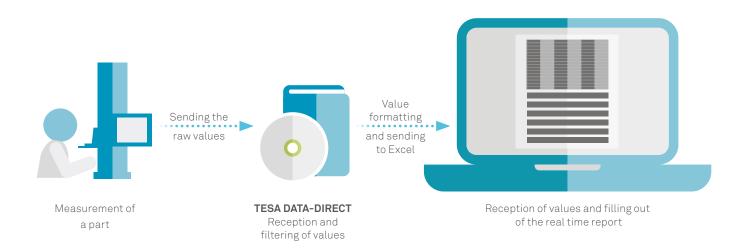




### The quick and easy statistical software


The SPC (Statistical Process Control) TESA STAT-EXPRESS software is the way to calculate in real time all the important characteristics during statistical analyses. Quick to learn, it manages also automatically the measuring reports.



Measurement of a part

**TESA STAT-EXPRESS** Reception and statistical value management

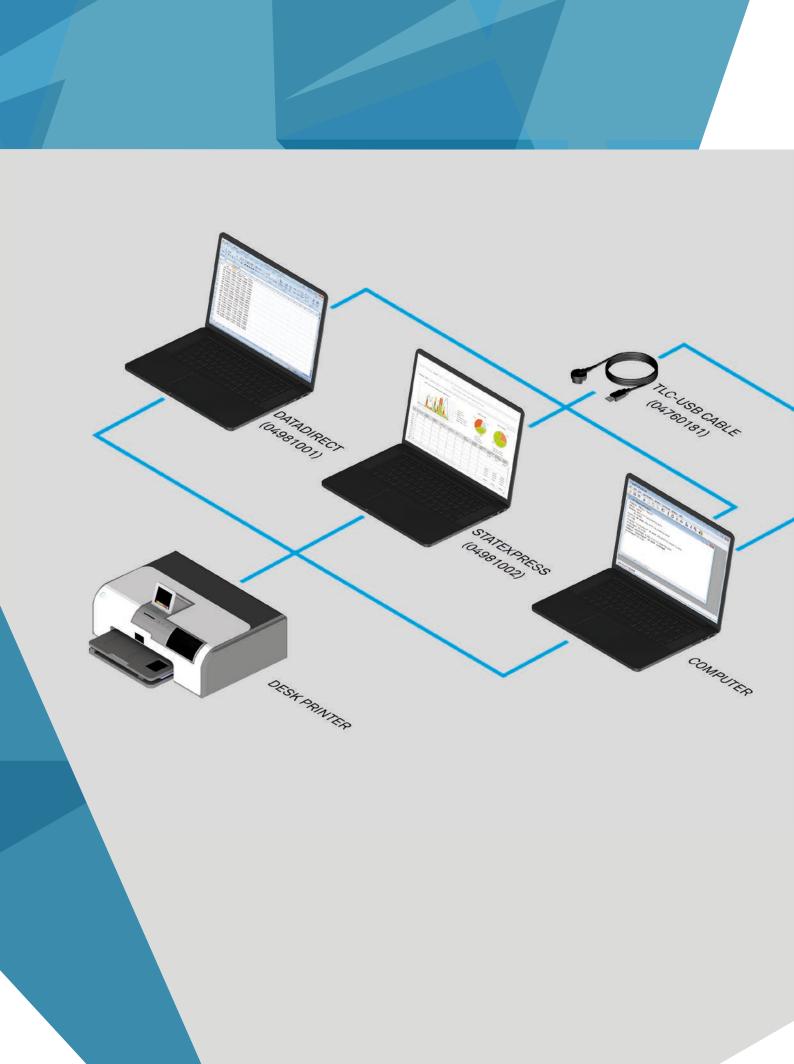

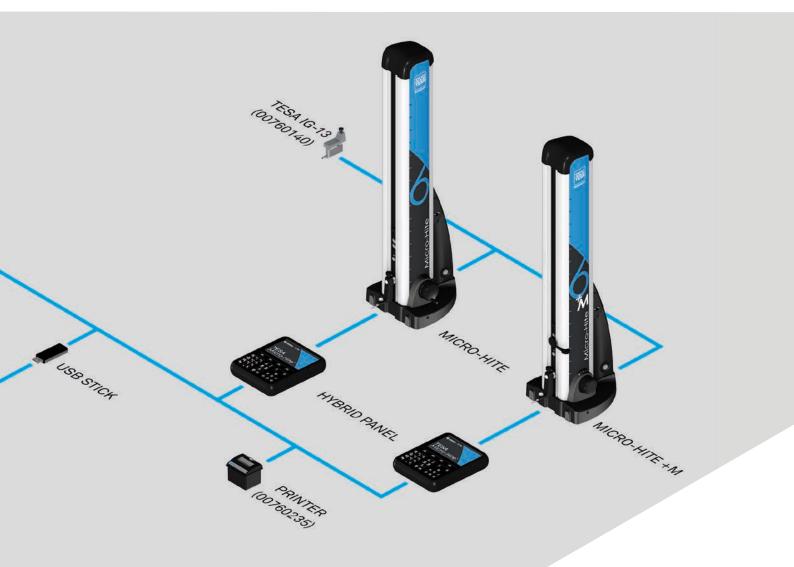



		MICRO-HITE	MICRO-HITE+M
	Probing shortcut		with knob
	Single probing	•	٠
	Culmination point	•	٠
	Double probing	٠	٠
	Max, min, delta	٠	٠
	Perpendicularity Straightness	•	٠
A	Angle	•	٠
+ × =	Embedded calculator	•	٠
<b>2D</b>	2D functions	•	٠
Q	References	A/B	A/B
	Distance	•	٠
ţ	Mid-point	•	•
<b>(±</b> )	Tolerancing GO/NOGO report	•	٠
	mm/inch conversion	•	٠
<ul> <li>(₹) </li> <li>(₹) </li> </ul>	Online help	٠	٠
<b>♀</b>	Preset	٠	٠
	Learning/programming mode	٠	٠
Ŷ	Save data on USB stick	٠	٠
	Send data through TLC port	٠	٠
<b>F</b>	Print data	٠	٠
•	Screen shot	٠	٠

CONFIGURATIONS



						6		1		
				MICRO	)-HITE			MIC	RO-HI1	ΓE+M
	Sales references	00730073	00730074	00730075	00730076	00730077	00730078	00730079	00730080	00730081
ТҮРЕ	Manual displacement	•	٠	٠	٠	•	•			
Τ	Motorised displacement							٠	٠	٠
	MICRO-HITE [mm]	350	600	900	350	600	900			
GAUGE	MICRO-HITE+M [mm]							350	600	900
GAL	Air cushion	•	•	٠	٠	•	•	•	•	٠
	Fine adjustment device				٠	٠	٠			
	MICRO-HITE panel	٠	٠	٠	٠	٠	٠			
Ц	MICRO-HITE+M panel							٠	٠	٠
PANEL	USB printer					optiona	l			
	Adjustable panel support	٠	٠	٠	٠	٠	٠	٠	٠	٠
(J)	Ø 6 mm probe holder	٠	٠	٠	٠	٠	٠	٠	٠	٠
SORIE	Ø 5 mm probe, hard metal	٠	•	٠	٠	٠	٠	٠	٠	٠
ACCESSORIES	12,7 mm / .5 in masterpiece	٠	٠	٠	٠	٠	٠	٠	٠	•
٩	Dust cover					optiona	l			
~	Removable/reloadable battery	٠	٠	٠	٠	٠	٠	٠	٠	٠
POWER SUPPLY	Power supply	•	•	٠	•	٠	٠	٠	٠	٠
OWER	EUR power cable	٠	•	٠	•	٠	٠	٠	٠	•
ď	US power cable	٠	٠	٠	٠	٠	٠	٠	٠	٠
(0	SCS certificate	٠	٠	٠	٠	٠	٠	٠	٠	٠
OTHERS	1 year warranty	٠	٠	٠	٠	٠	٠	٠	٠	٠
0	Maintananaa aantraat					on roqu	oct			

upon request



# **MICRO-HITE**



For workshops and laboratories

Manual displacements



With or without fine adjust. device



Adjustable panel

Colour & touch screen


Included SCS certificate

1D & 2D measurement modes

	MICRO-HITE 350	MICRO-HITE 600	MICRO-HITE 900
Range of application [mm]	520	770	1075
Max. perm. error [µm], L [mm]	2+2L/1000	2+2L/1000	2+2L/1000
Repeatability (2ơ) [µm]	on surface:≤1 on arc:≤1	on surface:≤1 on arc:≤1	on surface∶≤1 on arc∶≤1
Max. perp. error with IG13 probe [µm]	frontal : 5 lateral : 5	frontal:7 lateral:7	frontal:9 lateral:9
Max perp. error, mechanical [µm]	frontal:7	frontal:9	frontal:11
Autonomy [h]	8	8	8
Trigger force [N]	1,6 ± 0,25	1,6 ± 0,25	1,6 ± 0,25
Panel [mm]	screen, HxL: 84x152 keyboard: backlit	screen, HxL: 84x152 keyboard: backlit	screen, HxL: 84x152 keyboard: backlit
Resolution	0,01/0,001/0,0001	0,01 / 0,001 / 0,0001	0,01/0,001/0,0001
Weight (with panel) [kg]	33	37	45

# MICRO-HITE+M



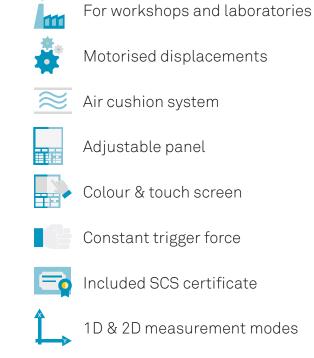

	MICRO-HITE+M 350	MICRO-HITE+M 600	MICRO-HITE+M 900
Range of application [mm]	520	770	1075
Max. perm. error [µm], L [mm]	1,8+2L/1000	1,8+2L/1000	1,8+2L/1000
Repeatability (2ơ) [µm]	on surface: ≤0,5 on arc:≤1	on surface:≤0,5 on arc:≤1	on surface:≤0,5 on arc:≤1
Max. perp. error with IG13 probe [µm]	frontal:5 lateral:5	frontal: 7 lateral: 7	frontal:9 lateral:9
Max perp. error, mechanical [µm]	frontal:7	frontal:9	frontal: 11
Autonomy [h]	8	8	8
Trigger force [N]	1,6 ± 0,25	1,6 ± 0,25	1,6 ± 0,25
Panel [mm]	screen, HxL: 84x152 keyboard: backlit	screen, HxL: 84x152 keyboard: backlit	screen, HxL: 84x152 keyboard: backlit
Resolution	0,01/0,001/0,0001	0,01/0,001/0,0001	0,01 / 0,001 / 0,0001
Weight (with panel) [kg]	33	37	45



The vast majority of motor vehicle components are subject to the fine quality requirements, that imply a commitment to excellence on the part of manufacturers and to propose a flawless product. The height gauges MICRO-HITE and MICRO-HITE+M can be integrated very close to the place of manufacture in order to minimise the impact on the performance of the production chain. The engine components, injection systems and brake systems are examples among multiple applications, which can be measured thanks to the range of gauges available.



Measurement of an engine block

00760164 Ø 5 mm ball probe

> 00760087 Probe holder for depth up to 185 mm

MICRO-HITE+M 600



Measurement of a plastic injection mould for a drill plastic cover

# Moulds and tooling

The use of parts made in large series from moulds is nowadays very common and affects all industries, from the food to the aeronautics or the cosmetics industry. For plastic, cast-iron, steel or other materials, the metrological aspect is of paramount importance. It is indeed very often about developing shapes of complex forms and of high precision, regardless of the size of the finished product. The MICRO-HITE or MICRO-HITE+M columns are, hence one of the central parts in order to validate the high quality of these moulds elaboration.





# Medical


Like in other industries, the development of products and medical systems is subject to several crucial factors such as performance and cost though primarily to a regulated environment, ..., but first of all to a regulatory environment in which the standards become increasingly high for obvious health reasons.

In this context, companies must constantly adapt to innovate, develop and produce.

The quality of a product used in the medical field is the subject of numerous controls throughout its creation process. Medical Instruments (pumps,...), orthopaedic implants (prostheses, ...) and medical equipment of today often include small components which are receiving greater attention. The MICRO-HITE or MICRO-HITE+M demonstrates the excellence of metrology and are pivotal in the development of medical devices. Upon arrival of the spare parts, numerous protocols and analytical methods are implemented to guarantee the regulatory compliance of products and to have a perfect knowledge before assembling the components in the production line.



Determination of the height of a groove on a piece integrated in a measuring device for endoscopy

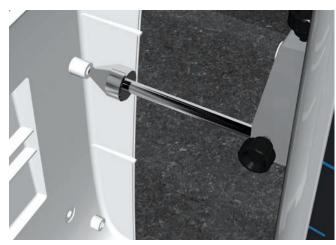

### Plasturgy

Metrology is of high importance for the product quality and represents many challenges if it concerns products issued from the assembly of moulded plastic spare parts. Plasturgy is constantly evolving and developing without cease for sectors as vast as the aeronautics, the automotive and the health industry. New plastics emerge regularly (always more environmentally-friendly, less dependent on oil, unbreakable, fireproof, ...). Therefore it is very important to be able to validate the stability of their processes during their development and over the long term. The MICRO-HITE and MICRO-HITE+M height gauges are an essential added value that allows high quality measurements and accelerates new product definition processes.



# **ACCESSORIES**

The TESA height gauges are compatible with a wide range of accessories which allowing the instrument to be customised to meet your real needs.

## Panels, printer & masterpiece

Setting piece	00760236 12,7 mm/.5 in
USB Printer	00760235 -
Panel for MICRO-HITE+M	00760234 -
Panel for MICRO-HITE	00760233 -





00760235


00760233

00760234

00760236

## Probe holders


Ø 6 mm standard probe holder	00760243	-
Ø 6 mm probe holder	00760086	For depth up to 110 mm
Ø 6 mm probe holder	00760087	For depth up to 185 mm
Ø 6 mm probe holder	00760057	Extend the scope of the application
Ø 6 mm probe holder	S07001622	Extend the scope of the application
Ø 8 mm probe holder	00760223	-
Adapter for M3 probe and shaft	00760177	-
Adapter for M1,4 and M2,5 probes	00760096	3 x M1,4 + 2 x M2,5

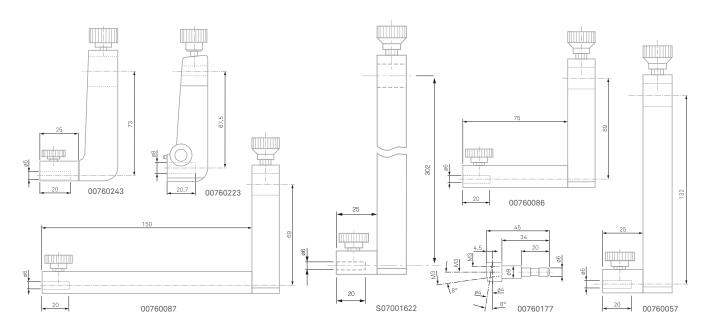

### Ball probes

The ball probes are the easiest and most often used in combination with the height gauges which are furthermore delivered as standard with a probe of this type. Because of its form, these accessories are suitable for the majority of probing applications.

Ø 0,9 mm ball probe	00760180	M3 fixation	Hardened steel ball tip
Ø 1,9 mm ball probe	00760181	M3 fixation	Hardened steel ball tip
Ø 2,9 mm ball probe	00760182	M3 fixation	Hardened steel ball tip
Ø 1 mm ball probe	00760228	Ø6mm fixation	Shank and ball tip in hard metal
Ø 2 mm ball probe	00760229	Ø6 mm fixation	Shank and ball tip in hard metal
Ø 3 mm ball probe	00760230	Ø 6 mm fixation	Shank and ball tip in hard metal
Ø 3 mm ball probe	00760061	Ø6 mm fixation	Ball tip in hard metal
Ø 5 mm ball probe	00760227	Ø6 mm fixation	Shank and ball tip in hard metal
Ø 10 mm ball probe	00760060	Ø6 mm fixation	Ball tip in hard metal
Ø 1 mm ball probe	0071684818	Ø 8 mm fixation	Adjustable shank for depth measurement
Ø 4 mm ball probe	0071684815	Ø 8 mm fixation	Ball tip in hard metal
Ø 6 mm ball probe	0071684825	Ø 8 mm fixation	Ball tip in hard metal
Ø 6 mm ball probe	0071684816	Ø 8 mm fixation	Ball tip in hard metal
Ø 8 mm ball probe	0071684832	Ø 8 mm fixation	Ball tip in hard metal
Ø 10 mm ball probe	007100/017	Ø 8 mm fixation	Ball tip in hard metal
Ø TO IIIII Datt probe	0071684817	Øðmmnxation	Datt tip in hard metal

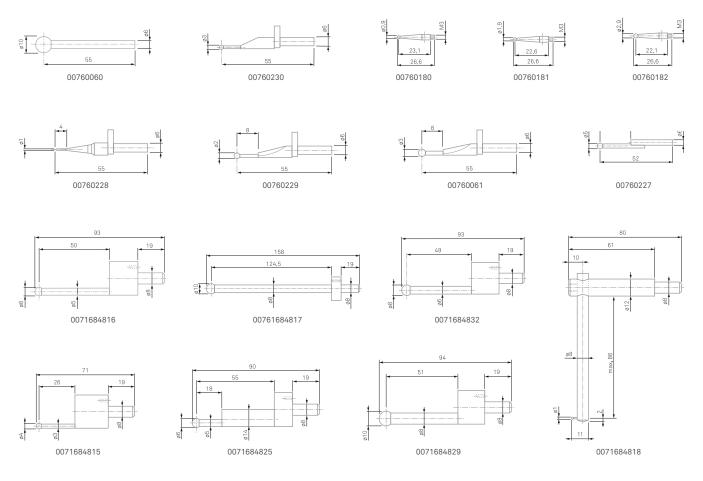

## Disc probes

These probes have the form of a disc with a variable thickness and diameter, allowing the probing of centring shoulders and grooves. These accessories are often used in internal bore measurements because they are a good replacement when the star-formed probes cannot be used.

		<u>→1 - 2</u>	
Disc probe Ø	Ø 12 mm	0071684827	Ø 8 mm fixation
Disc probe Ø	Ø 19 mm	00760076	Ø 6 mm fixation, hard metal disc
Disc probe Ø	Ø 14 mm	00760075	Ø 6 mm fixation, hard metal disc
Disc probe Ø	Ø 4,5 mm	00760074	Ø 6 mm fixation, hard metal disc

00760076




00760074

Cone probes are mainly used to determine the location of a bore since their form allows a quick positioning at the centre of these elements.

00760075


Cone probe Ø 8 mm	00760183	M3 fixation, hardened steel
Cone probe Ø 6 mm	0071684822	Ø 8 mm fixation, hardened steel
Cone probe Ø 22 mm	0071684819	Ø 8 mm fixation, hardened steel

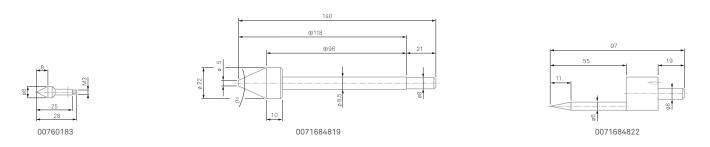

### Shaft probes

The shaft probes are mainly used to measure grooves, centring shoulders, blind bores, ...

Probe inserts with a shank	00760094	hardened steel
Rod, angle 8°	00760178	hardened steel
Cylindrical rod	00760179	hard metal

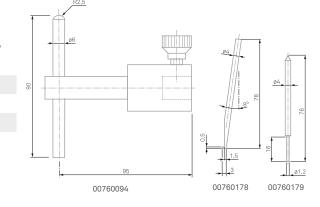


0071684827

### Cylindrical or barrel probes

The cylinder-shaped probes are often used to measure elements that cannot or hardly not easily be measured with a simple ball probe. In some instances, the contact between the accessory and the part to be measured cannot be guaranteed when the tip of the accessory is a ball. They are also used for the measurement of threads and often for the determination of the centre of tapped bores.


Barrel-shaped probe Ø 2,2 mm	00760066	Ø 6 mm fixation, hard metal measuring faces
Barrel-shaped probe Ø 4,5 mm	00760067	Ø 6 mm fixation, hard metal measuring faces
Barrel-shaped probe Ø 9,7 mm	00760068	Ø 6 mm fixation, hard metal measuring faces
Cylinder-shaped probe Ø 2 mm	00760082	Ø 6 mm fixation, hard metal measuring faces
Cylinder-shaped probe Ø 10 mm	00760093	Hardened steel housing, hard metal measuring faces
Cylinder-shaped probe Ø 10 mm	0071684820	Ø 8 mm fixation, steel

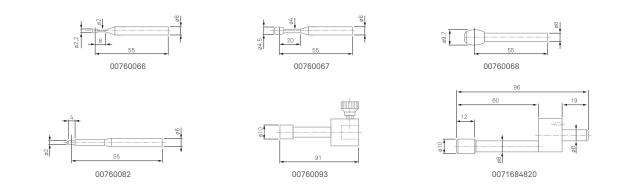

### Accessories for squareness measurement

In addition to the standard measuring modes, the manual and motorized models of the MICRO-HITE range have been specially developed to allow the determination of perpendicularity or straightness errors. The measurements can be realized in two directions, as these gauges are the only ones on the market allowing this measurement as well frontally as laterally.

Probe holder for a dial test indicator (lever-type)	00760222	-
IG13 probe	00760139	-
Attachment system for IG13	00760138	-
IG13 probe set	00760140	= 00760139 + 00760138
IG13/height gauge adapter	00760247	To use together with IG13 delivered before 2017

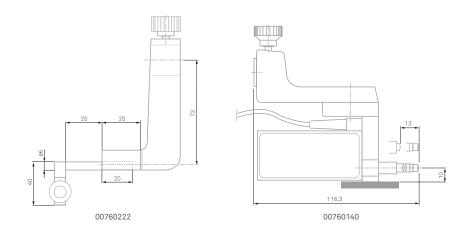

# SETS OF ACCESSORIES

			Kit 1 8 elements 00760232	Kit 2 8 elements 00760173	Kit 3 17 elements 00760148	Kit 4 9 elements 00760175
Com	posed of					
ى ە	00760057	Ø 6 mm probe holder to extend the application range			٠	
Probe holders	00760086	Ø 6 mm probe holder for depth up to 110 mm			٠	
robe h	00760087	Ø 6 mm probe holder for depth up to 185 mm			٠	
<u> </u>	00760177	Adapter for M3 probes				٠
	00760060	Ø 10 mm ball probe, Ø 6 mm fixation		٠	٠	
	00760061	Ø 3 mm ball probe, Ø 6 mm fixation	٠	٠	٠	
	00760066	Ø 2,2 mm barrel-shaped probe, Ø 6 mm fixation			•	
	00760067	Ø 4,5 mm barrel-shaped probe, Ø 6 mm fixation			٠	
	00760068	Ø 9,7 mm barrel-shaped probe, Ø 6 mm fixation			•	
	00760074	Ø 4,5 mm disc probe, Ø 6 mm fixation			٠	
	00760075	Ø 14 mm disc probe, Ø 6 mm fixation	٠	•	•	
	00760076	Ø 19 mm disc probe, Ø 6 mm fixation			٠	
Probes	00760082	Ø 2 mm cylinder-shaped probe, Ø 6 mm fixation	٠		•	
Pro	00760093	Ø 10 mm cylinder-shaped probe		٠	٠	
	00760094	Probe with hardened steel rod	٠	٠	٠	
	00760180	Ø 0,9 mm ball probe, M3 fixation				•
	00760181	Ø 1,9 mm ball probe, M3 fixation				٠
	00760182	Ø 2,9 mm ball probe, M3 fixation				٠
	00760183	Ø 8 mm cone probe, M3 fixation				٠
	00760228	Ø 1 mm ball probe, Ø 6 mm fixation		٠	٠	
	00760229	Ø 2 mm ball probe, Ø 6 mm fixation		•	٠	
	00760230	Ø 3 mm ball probe, Ø 6 mm fixation		٠	٠	
sions	00760184	Extension M3, L 20 mm				•
Extensions	00760185	Extension M3-M2,5, L 20 mm				•
aft ies	00760178	Steel rod, angle 8°				•
She prob	00760178	Hard metal cylindrical rod				٠

# OTHER ACCESSORIES

	Thermal Paper for USB Printer	00760250	Pack of 4 rolls
ent	TESA DATA-DIRECT software	04981001	For data formatting
agem	TESA STAT-EXPRESS software	04981002	SPC software
Data Management	Sub-D 9p/m to USB cable	04761063	_
Data	TLC-USB Cable	04760181	-
	Sub-D9p/m to Sub-D9p/fcable	04761052	-
-	Dust cover, 350 mm	00760151	-
ng anc ction	Dust cover, 600 mm	00760152	-
leanin orotec			
lean prote	Dust cover, 900 mm	00760153	-
Cleaning and protection	Dust cover, 900 mm Cleaning liquid	00760153 00760249	- For granite table
	Cleaning liquid	00760249	For granite table
	Cleaning liquid Battery block	00760249 00760244	For granite table Rechargeable, interchangeable
	Cleaning liquid Battery block Battery recharging station	00760249 00760244 00760245	For granite table Rechargeable, interchangeable For 00760244 battery
Electric power supply Clean prot	Cleaning liquid Battery block Battery recharging station Charger	00760249 00760244 00760245 00760251	For granite table Rechargeable, interchangeable For 00760244 battery -
	Cleaning liquid Battery block Battery recharging station Charger Charger cable	00760249 00760244 00760245 00760251 04761055	For granite table Rechargeable, interchangeable For 00760244 battery - For Europe

# THE TESA SERVICE, OUR PRIORITY

For TESA, customer care is essential. To satisfy the most demanding metrological expectations of our clients and to help them find solutions is our daily challenge.



### Calibration

To preserve the accuracy of measurement of your tools, TESA controls and calibrates your equipment and delivers a SCS accreditation (Swiss Calibration Service) or a TESA measuring report.



### Reparation

Your height gauge needs to be repaired? TESA proposes quick solutions to repair, exchange and rent, if your equipment is under warranty or not.



### Support

A product support and technical support are available for TESA equipment.



### Training

A whole range of courses has been designed to meet your needs: user training during the installation, product training at TESA headquarters as well as on-site and customised trainings.



#### Maintenance

Work with peace of mind thanks to the preventive TESA maintenance contract to extend the life of your equipment and to preserve their precision.



### Customization of the measuring inserts

For any requirements of specific measures, TESA proposes to customise your measuring insert according to your wishes.





Hexagon Manufacturing Intelligence helps industrial manufacturers develop the disruptive technologies of today and the life-changing products of tomorrow. As a leading metrology and manufacturing solution specialist, our expertise in sensing, thinking and acting – the collection, analysis and active use of measurement data – gives our customers the confidence to increase production speed and accelerate productivity while enhancing product quality.

Through a network of local service centres, production facilities and commercial operations across five continents, we are shaping smart change in manufacturing to build a world where quality drives productivity. For more information, visit **HexagonMI.com**.

Hexagon Manufacturing Intelligence is part of Hexagon (Nasdaq Stockholm: HEXA B; **hexagon.com**), a leading global provider of information technologies that drive quality and productivity across geospatial and industrial enterprise applications.

Ŕ. COORDINATE MEASURING MACHINES 3D LASER SCANNING SENSORS PORTABLE MEASURING ARMS LASER TRACKERS & STATIONS MULTISENSOR & OPTICAL SYSTEMS WHITE LIGHT SCANNERS **\*** METROLOGY SOFTWARE SOLUTIONS STATISTICAL PROCESS CONTROL ЛV AUTOMATED APPLICATIONS Ŧ MICROMETERS, CALIPERS, HEIGHT GAGES, ETC ...



Established in 1941 and headquartered in Renens, Switzerland, TESA SA manufactures and markets precision measuring instruments that stand for quality, reliability and longevity.

For 75 years, TESA has distinguished itself in the market through its excellent products, its unique expertise in micromechanics and precision machining as well as its proven experience in dimensional metrology.

The TESA brand is the global market leader in the field of height gauges and a pioneer thanks to its wide range of instruments, including callipers, micrometers, dial gauges, lever-type dial test indicators and inductive probes. TESA is a true benchmark for the inspection of incoming goods, as well as for production workshops and quality assurance laboratories.

Through its worldwide distribution network the company focuses on the mechanical engineering, micromechanical, automotive, aerospace, watchmaking and medical industries. In 2001, TESA became part of Hexagon, a leading global provider of information technologies.

#### TESAtechnology.com

© Copyright 2016 Hexagon. All rights reserved.

Other brands and product names are trademarks of their respective owners. Hexagon believes the information in this publication is accurate as of its publication date. Such information is subject to change without notice.